


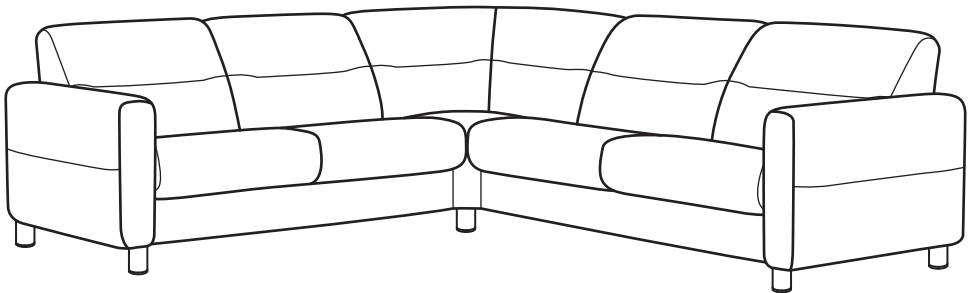
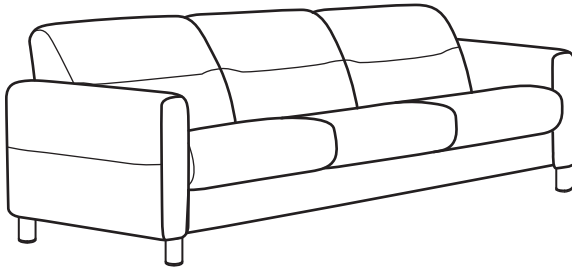
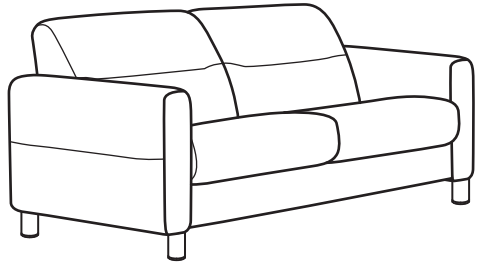
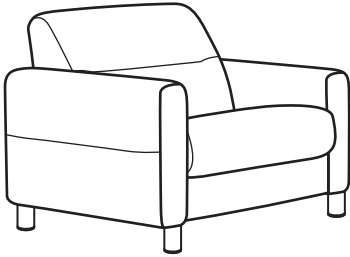






Assembly
Stressless® Fiona
Stressless® Flora

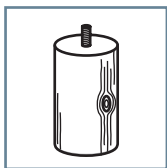


Mounting of legs sofa

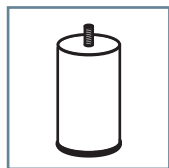



1

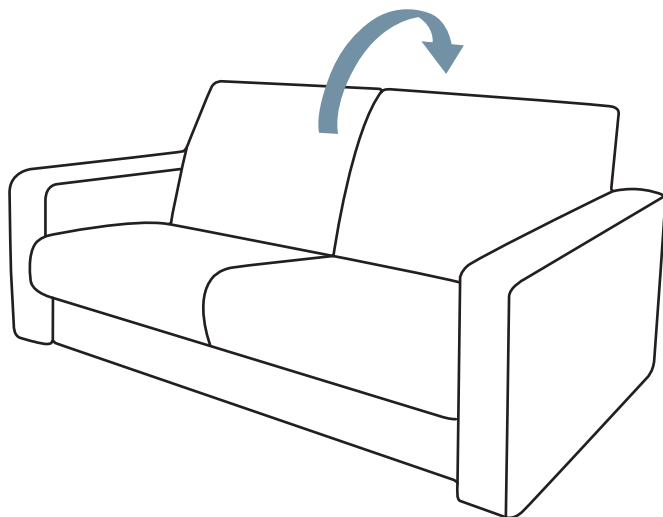

2

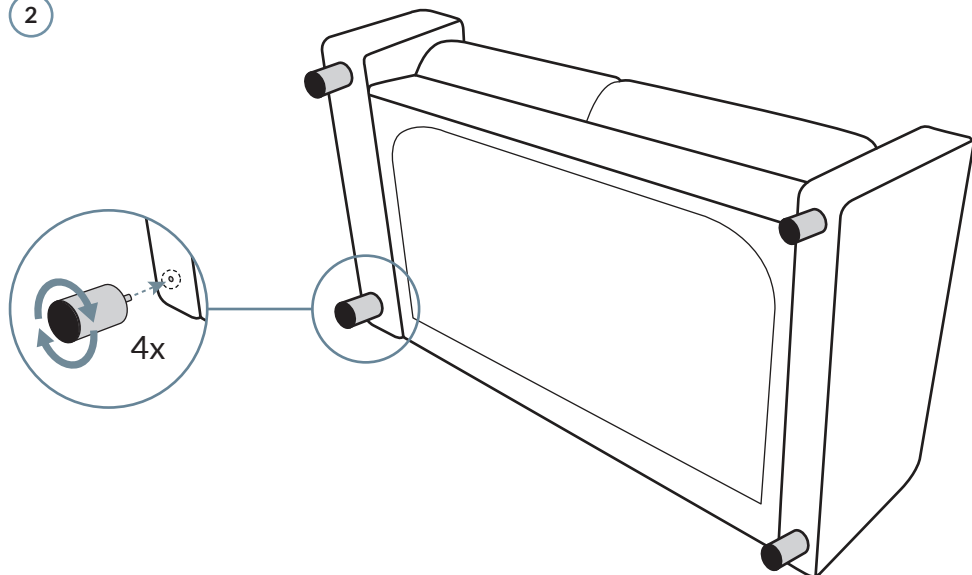


Mounting of legs sofa

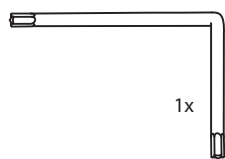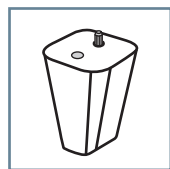

1x

99230315



4x

990001000

4x

990000856


4x

990002231


4x

990000514


1

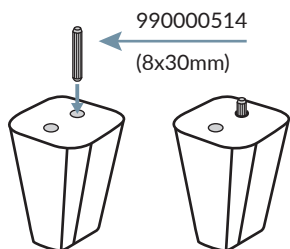

990000514
(8x30mm)

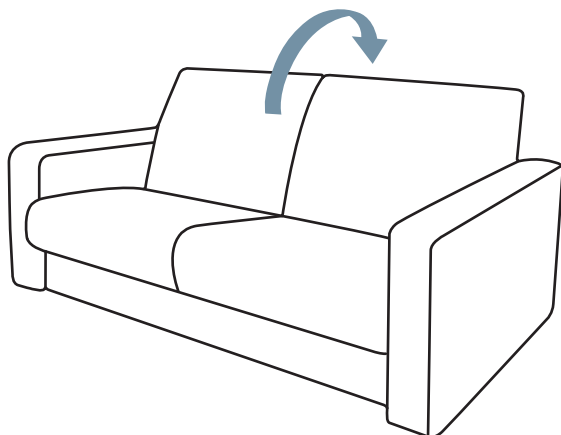

2

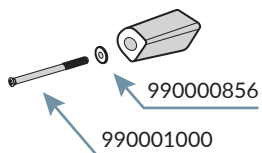


990000856
990001000


990002231




Mounting of legs corner

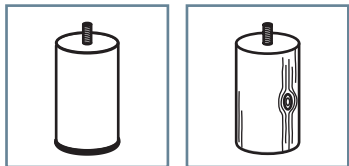



1

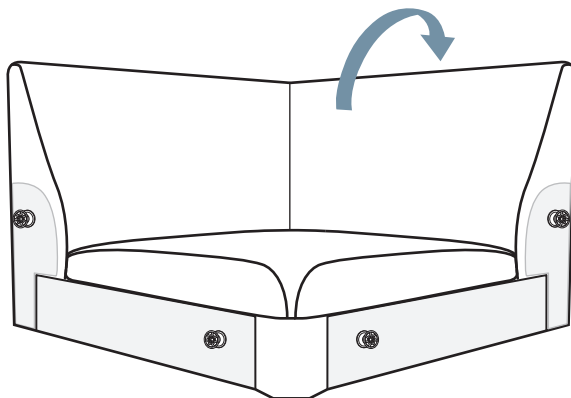


2

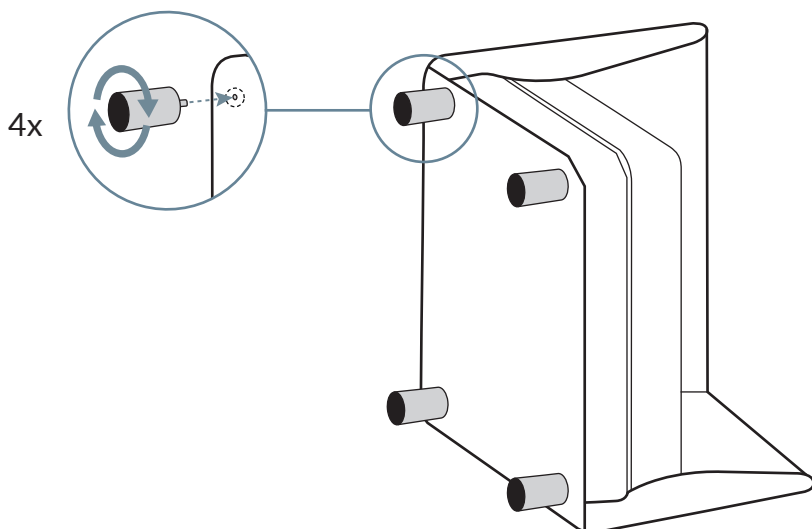

Mounting of legs corner

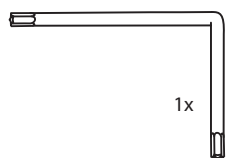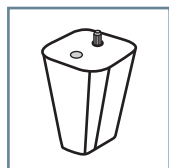

99230315



990001000



990000856





990002231




990000514


1

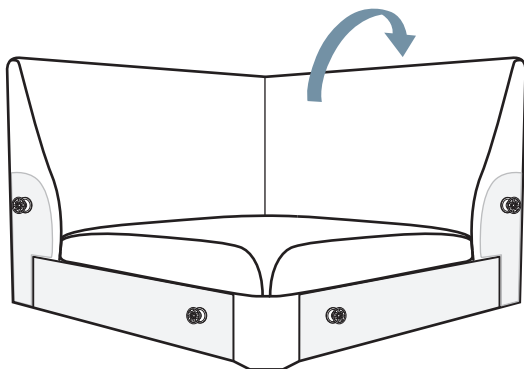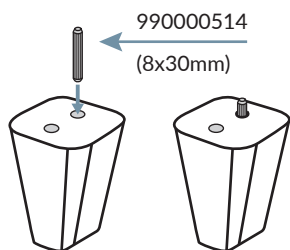


2





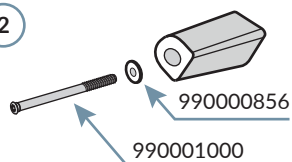


990002231




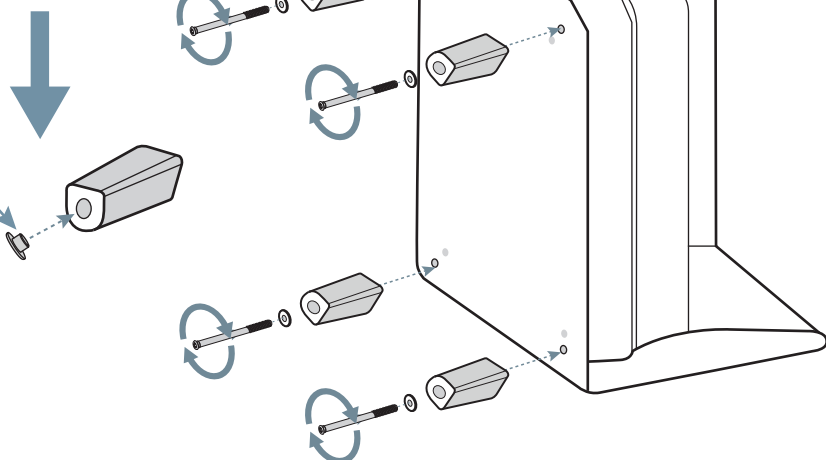


Sofa assembly

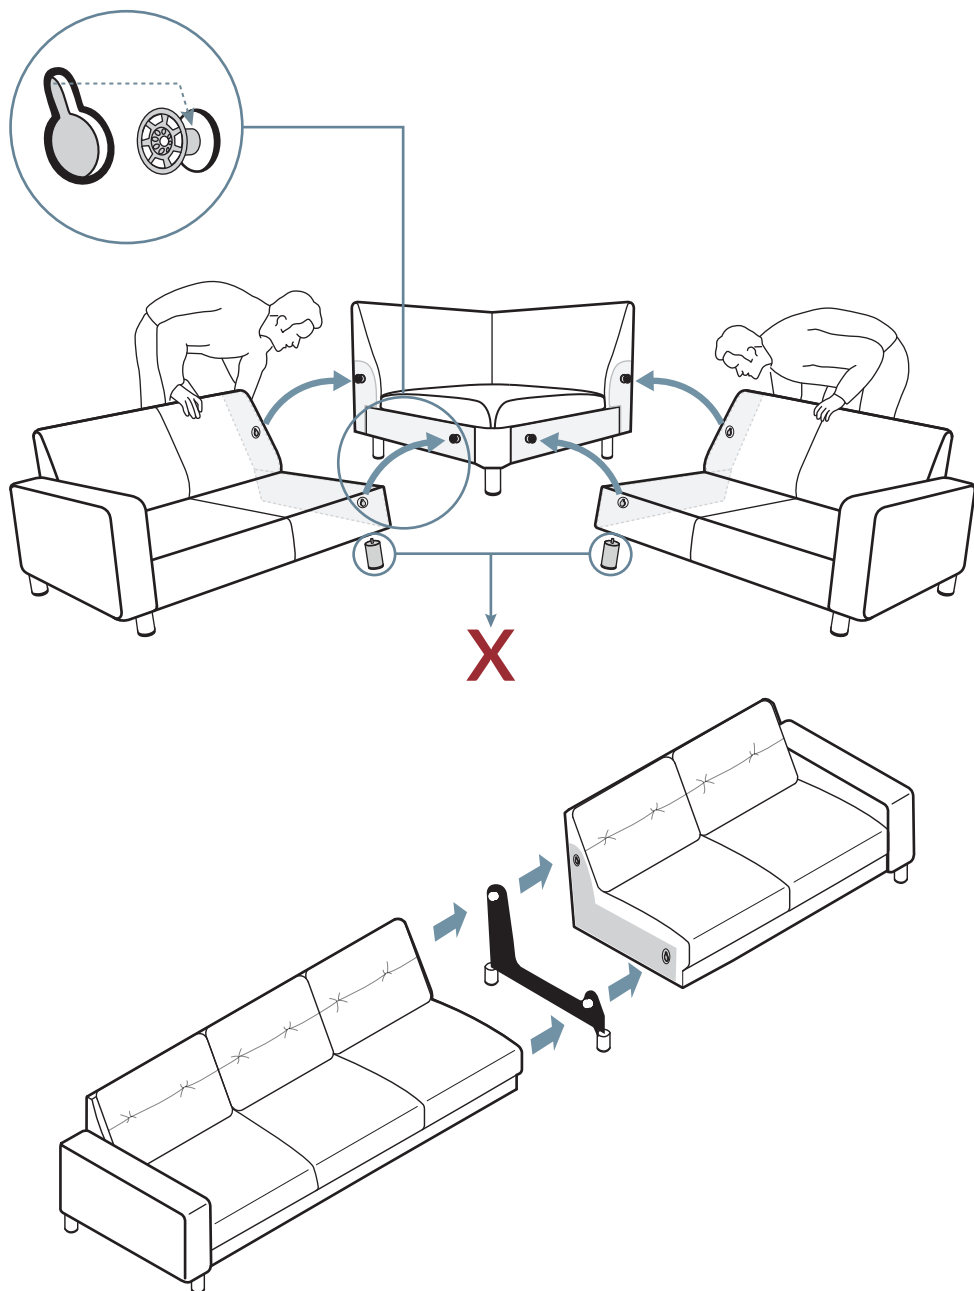

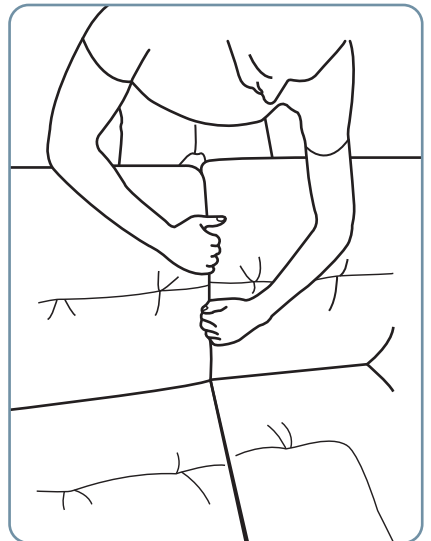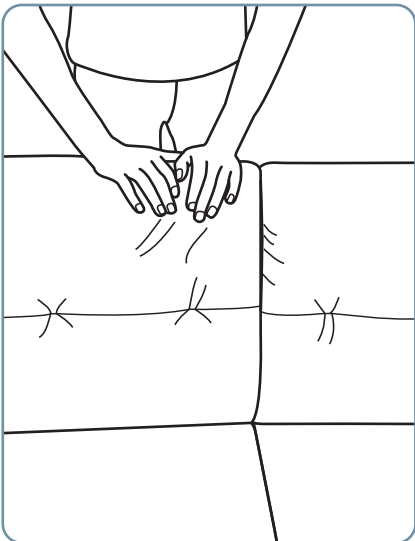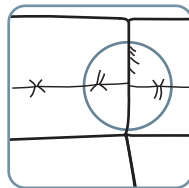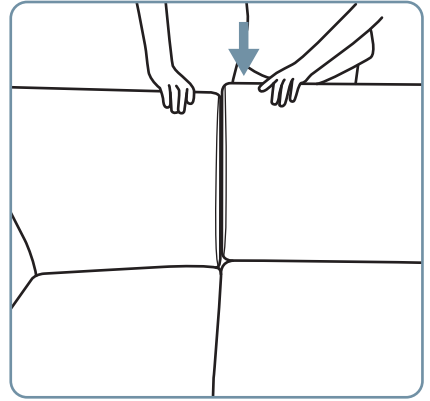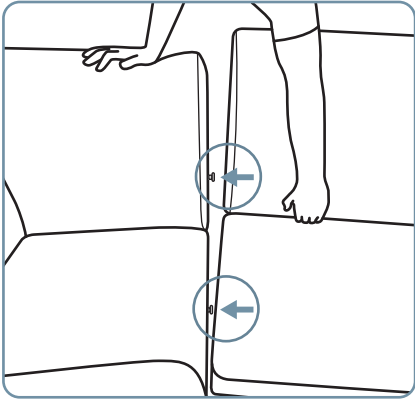

Side panel assembly

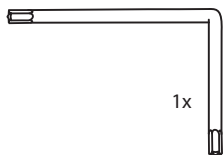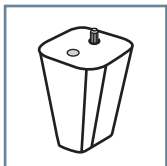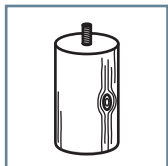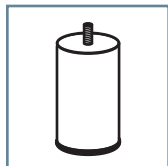

1x

99230315



2x

990001000

2x



990000856

2x





990002231

2x



990000514

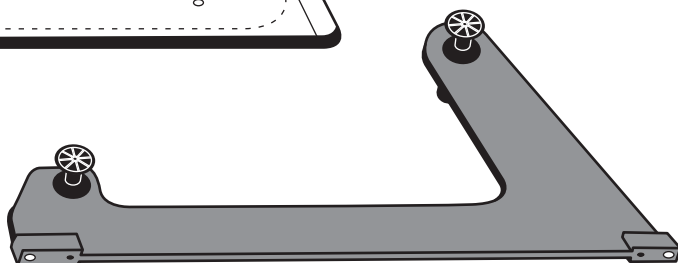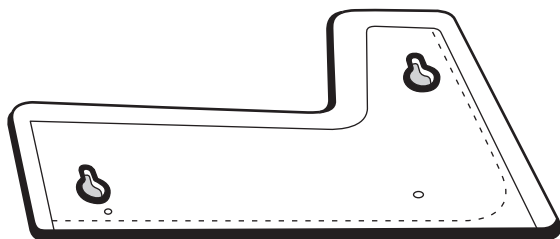

2x




990000859

2x





990000984


1

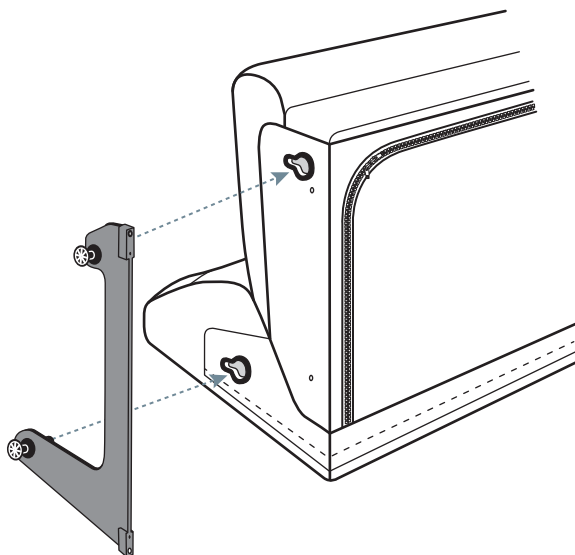


2

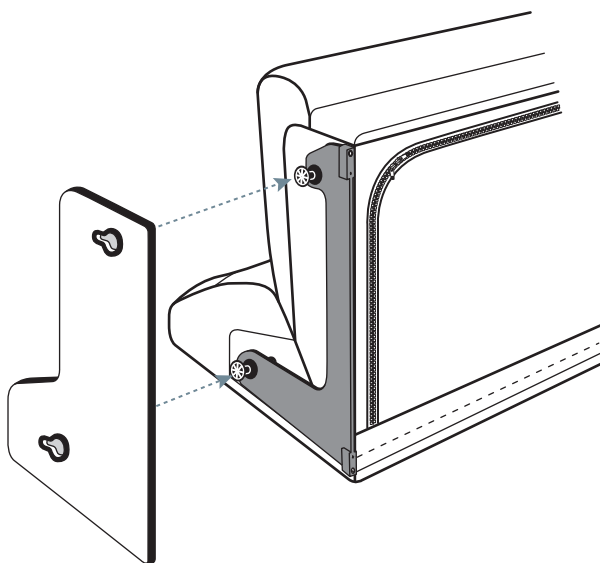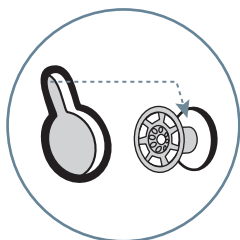


3

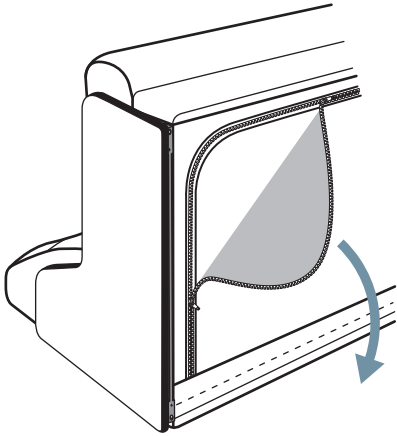

4



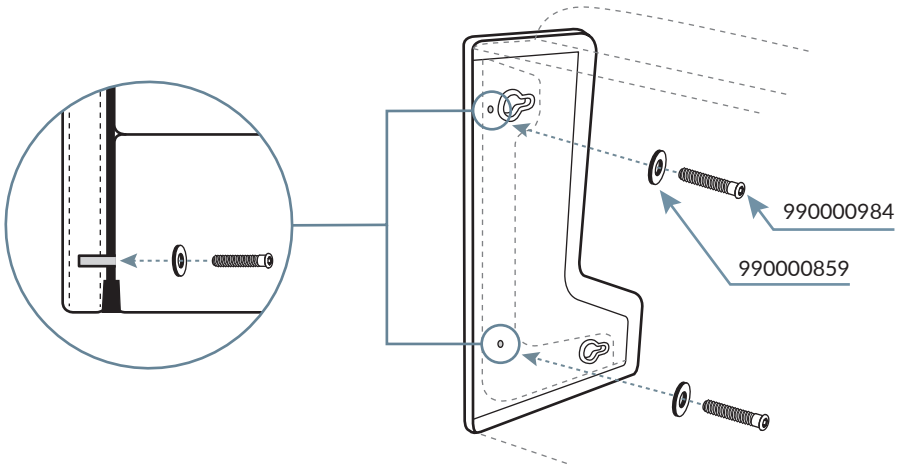


5

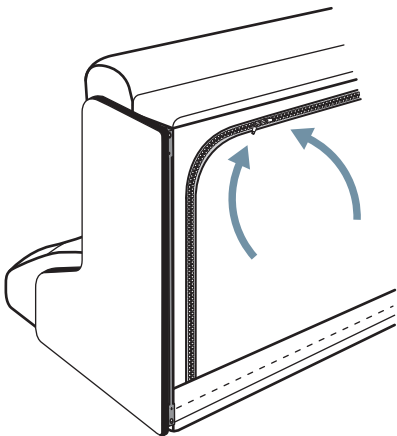

Mounting of legs side panel

6

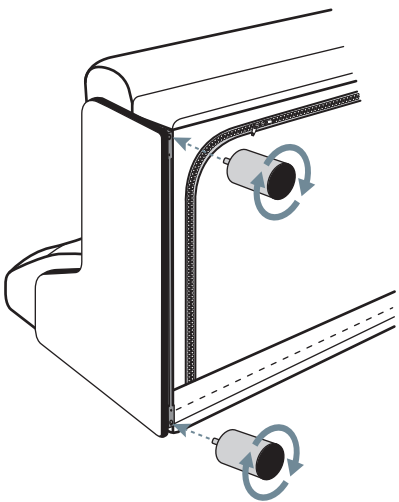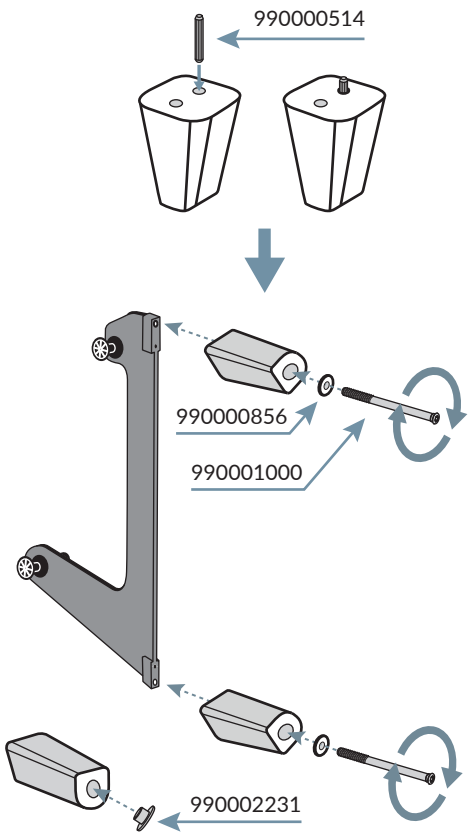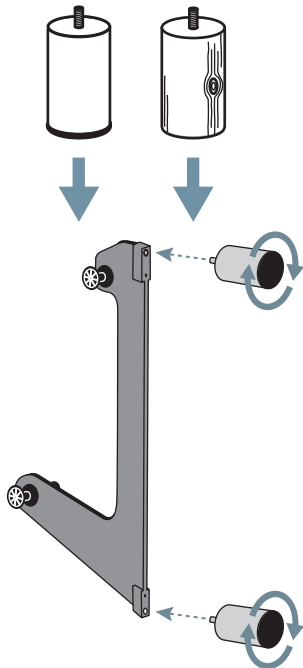



stressless.com

Ekornes AS, Industrivegen 1, N-6222 Ikornnes
Tel.: (+47) 70 25 52 00
E-mail: office.no@ekornes.com